

AX6600S

ALAXALA AX6600S
Quick Start Guide Corrections

■ Preface

This document contains corrections for the AX6600S Quick Start Guide (Copyright (c) 2009 ALAXALA Networks Corporation. All rights reserved.).

If you intend to use an AX6600S Switch, please read this document carefully.

This document applies to the following manual:

Item No.	Manual name	Manual number
1	ALAXALA AX6600S Quick Start Guide	AX66S-Q001X

■ Trademarks

- Ethernet is a product name of Xerox Corporation.
- Windows is a registered trademark of Microsoft Corporation in the United States and other countries.
- Other company and product names are trademarks or registered trademarks of their respective owners.

■ Note

The information in this document is subject to change without notice.

■ Edition history

July 21, 2009 (Edition 1)

■ Copyright

Copyright (c) 2009, ALAXALA Networks Corporation. All rights reserved.

Contents

Safety Information	4
---------------------------------	----------




Safety Information

The following note has been added after "■ Be careful with laser beam."

Addition:

- Do not touch the SFP-T transceiver during operation or just after operation has stopped.
- During operation, the temperature of the SFP-T transceiver can rise to 65°C, as when a link is being established. Do not touch the SFP-T transceiver while it is operating and just after it has stopped. Doing so could result in burns.

High-temperature warning
(During operation, all surfaces,
including the top, bottom, and the
sides, are hot.)

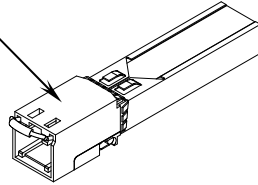

To remove the SFP-T transceiver, use the procedure below. Failure to do so could result in burns.

- To remove the SFP-T transceiver while the Switch is on, execute the `inactivate` command, and then wait 5 minutes before removing the SFP-T transceiver.
- To remove the SFP-T transceiver while the Switch is off, turn off the Switch, and then wait 5 minutes before removing the SFP-T transceiver.

The following label is attached to the SFP-T transceiver.

